


How can I find the SSID and WEP key for my VersaLink network?

You may need to know your SSID and WEP encryption key for several reasons. The most common reason is that you must configure every device on your wireless network to use the same SSID and WEP key. Each time you add a new device to your wireless home network, you'll need your SSID and WEP key.

To find your SSID and WEP key:

Note: The configuration screens may vary slightly depending on when you purchased your router and the version of firmware running on it.

1. Open your Web browser and enter **http://192.168.1.1** in the **Address** field.

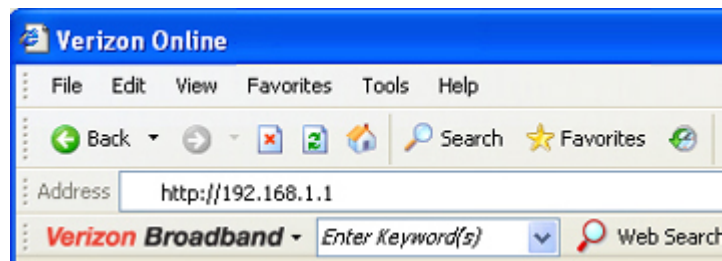


2. Enter your current user name in the **New User Name** field. If you haven't changed the user name, the default is "admin."




3. Enter your password in the **Password** field. You were required to change it during installation, so it can't be "password."
4. Click **OK**.


5. Click the **Wireless Settings** icon at the top of the screen.

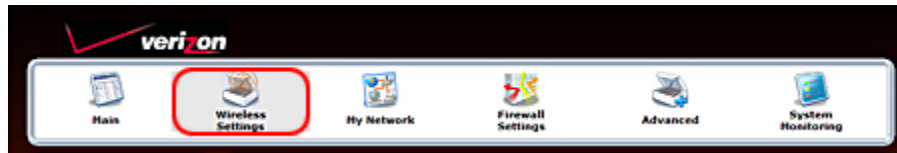

6. Click **Basic Security Settings** in the left navigation panel.

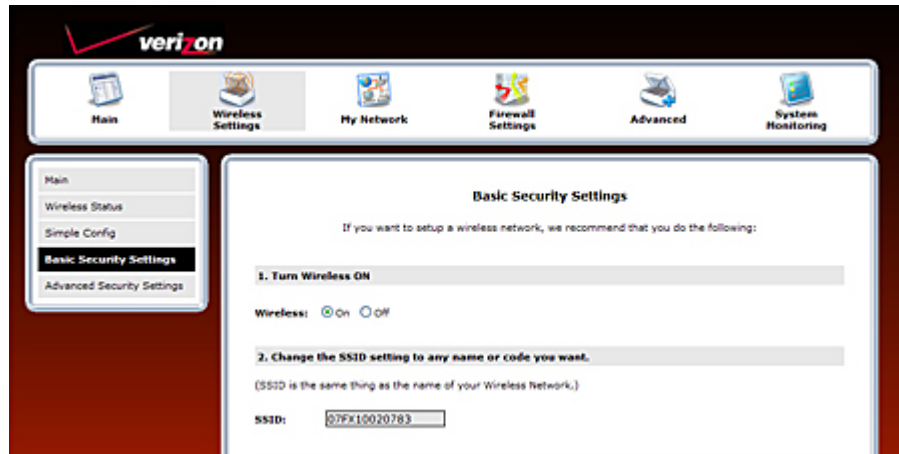

7. Go to Section 2 of the Basic Security Settings and write down the entry in the **SSID** field. This is simply a name for your network. It can include letters and numbers, but it can't include spaces or special characters.

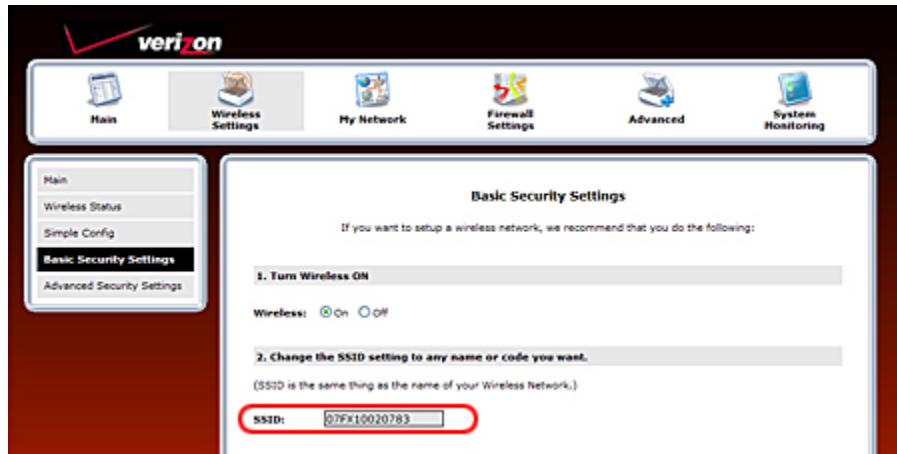

- o **Note:** If you change the SSID of your network, you must update each wireless adapter to recognize the new SSID.
8. Scroll down to Section 5 and write down the entries in the following fields:
 - o Select a WEP Key Entry Type (ASCII or Hex)
 - o Select a WEP Key (64/40 bit or 128/104 bit)
 - o Key Code

4. Turn WEP On

(We recommend using WEP because it encrypts your wireless traffic.)

WEP Off

5. Select a WEP Key

Note: To create a 64-bit WEP Key, you need to enter a combination of 10 digits. You can choose any letter from A-F, a-f or any number from 0-9.

Sample WEP Key: 0Fb310ff28

Select a WEP Key Entry Type:

Hex

Select a WEP Key:

64/40 bit

Key Code:

6161DF1639

0 Digits left.

9. Close the configuration window. Be sure to keep your SSID and WEP key in a safe place for future reference.